

SOTERA[®]

Anti-Drip Nozzle Spout

For use with Banjo[®]
and other nozzles with a 1" outside diameter


INSTALLATION:

Apply soapy water to the end of the nozzle to aid in the installation. Place the **Anti-Drip Nozzle Spout** on the nozzle as shown. Tap on the spout with a rubber mallet until it is fully engaged. The space between the end of the spout (A) and the step on the nozzle (B) should be slightly more than 4" when pressed on fully, as shown.

The nozzle can be cut shorter, if desired, before installing the **Anti-Drip Nozzle Spout**. Leave at least 1½" in front of the step on the nozzle (B).

USE:

Place the nozzle into the container to be filled **before** turning on the pump. After pumping, shut off yellow handled valve then gently shake the nozzle **before** removing it from the container. The spout will open when it feels a pressure greater than one (1) pound per square inch (p.s.i.). **Flow restriction will be minimal.**

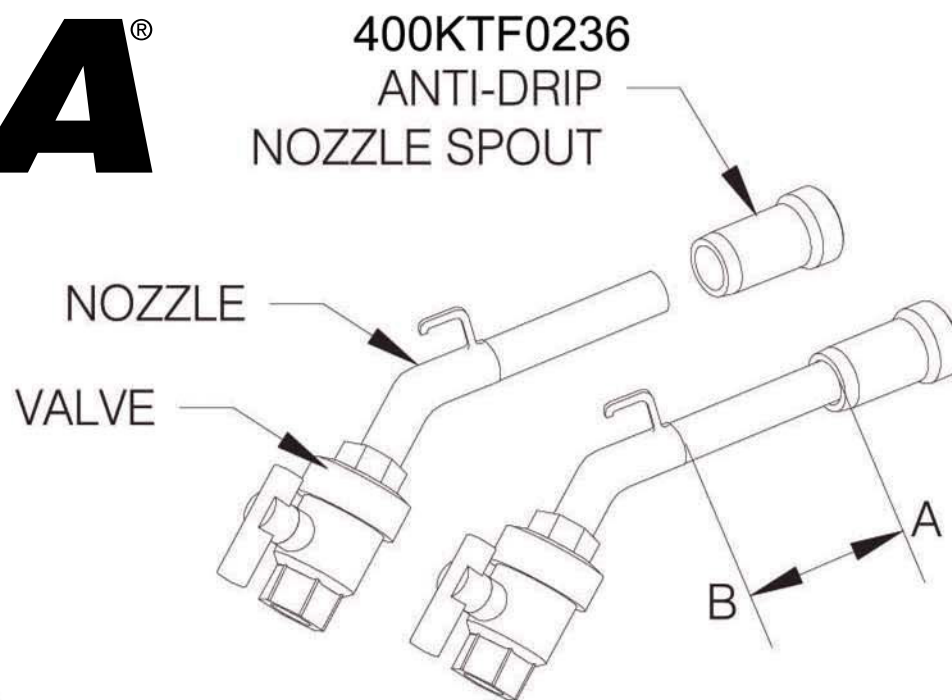

If you have any problems, please call
SOTERA at 1 (800) 720-5192.

Fill-Rite Company
8825 Aviation Drive
Fort Wayne, Indiana 46809 USA

T 1 (800) 720-5192
F 1 (800) 866-4681
sotera.com